



WEB-LOGGER

User Manual

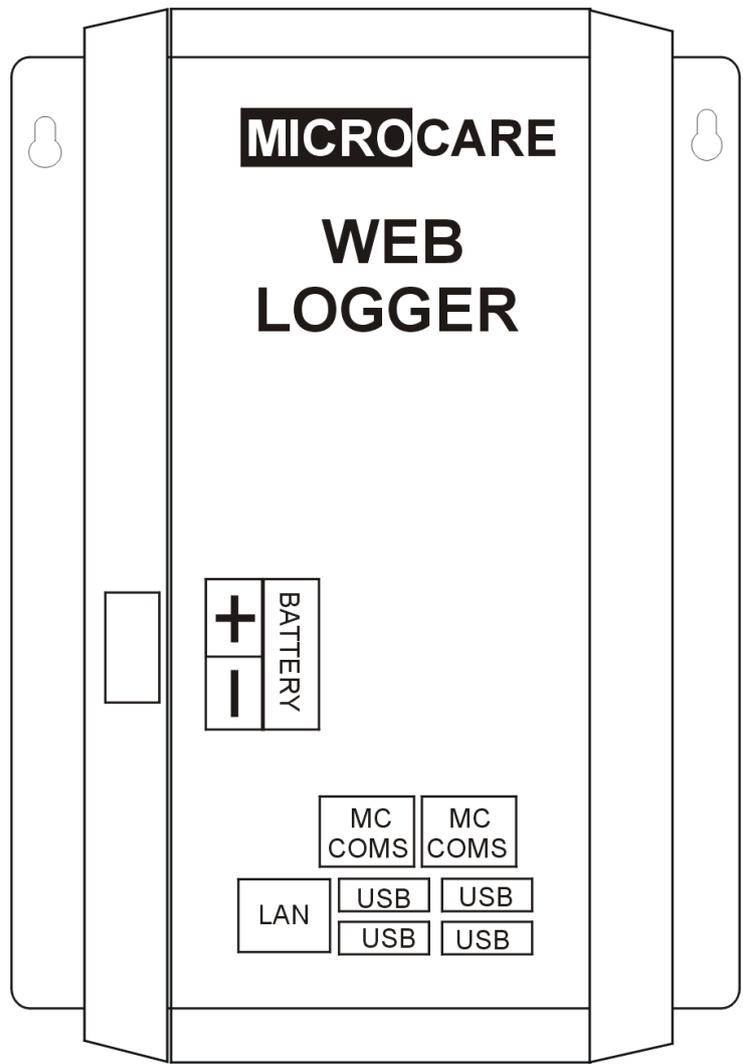


Table of Contents

1.1	Standalone (no Microcare Battery Monitor) wiring diagram:	3
1.2	In conjunction with a Microcare Battery Monitor wiring diagram:	4
2.	Accessing the logged data:.....	6
2.1	Registering your Web-Logger:.....	6
2.1.1	Weblogger ID:	7
2.1.2	Network Address:.....	7
2.1.3	Friendly Name:.....	7
2.1.4	Port to use:.....	7
2.1.5	Data Buffer:	7
2.1.6	Upload Size:.....	7
2.1.7	Upload Type:.....	8
3.	Registering Devices:.....	9
3.1	Adding a new device feed:.....	9
3.1.1	Select Weblogger:.....	10
3.1.2	Device Type:	10
3.1.3	Data Stream:	10
3.1.4	Network Address:.....	10
3.1.5	Request Interval (s):.....	10
3.1.6	Request Timeout:.....	10
3.1.7	Retry count:.....	11
3.2	Avoiding data request delays:.....	11
4.	The number of device feeds and the data buffer	11
5.	Device feed values:	12

1. INTRODUCTION


The Microcare Web-Logger can be used as a standalone Microcare device monitor and/or can be connected to operate in conjunction with a Microcare Battery Monitor.

In order to connect a Web-Logger to your Microcare devices, the following items are required:


1. Microcare Web-Logger.
2. Internet enabled router with at least one open port.
3. DHCP enabled on the router.
4. Microcare Battery Monitor or at least one Microcare device with a MC-Coms converter.

Connecting up:

1.1 Standalone (no Microcare Battery Monitor) wiring diagram:

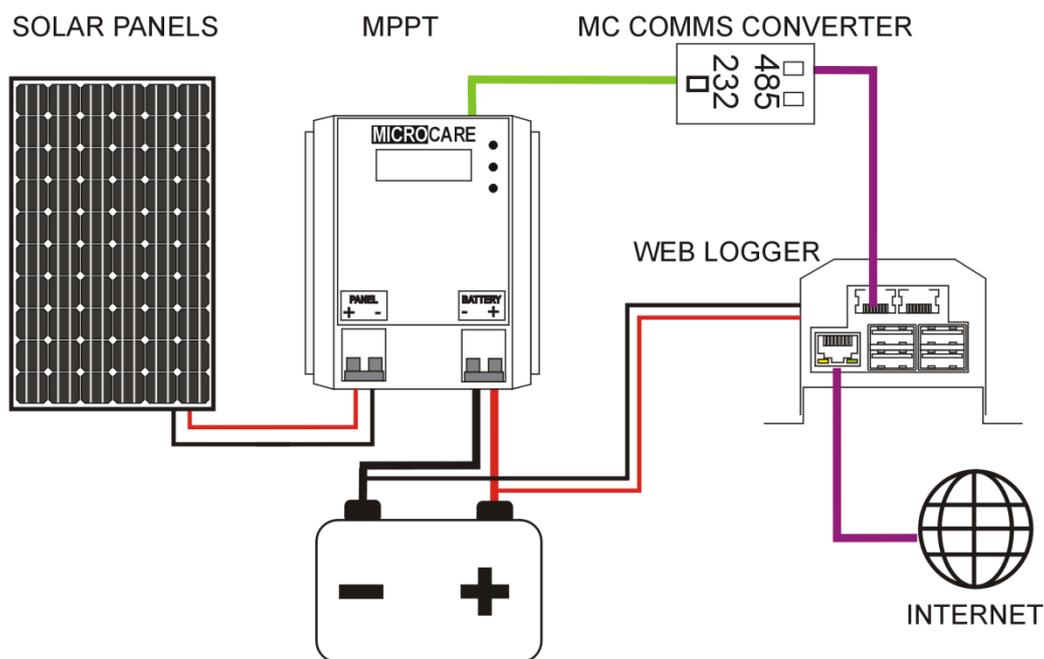


In this configuration, a single Microcare MPPT is connected to a MC COMS converter. The MC COMS converter is then connected to the MC COMS port of the Web-Logger. The LAN or Ethernet port of the Web-Logger is then connected to an Internet enabled router.

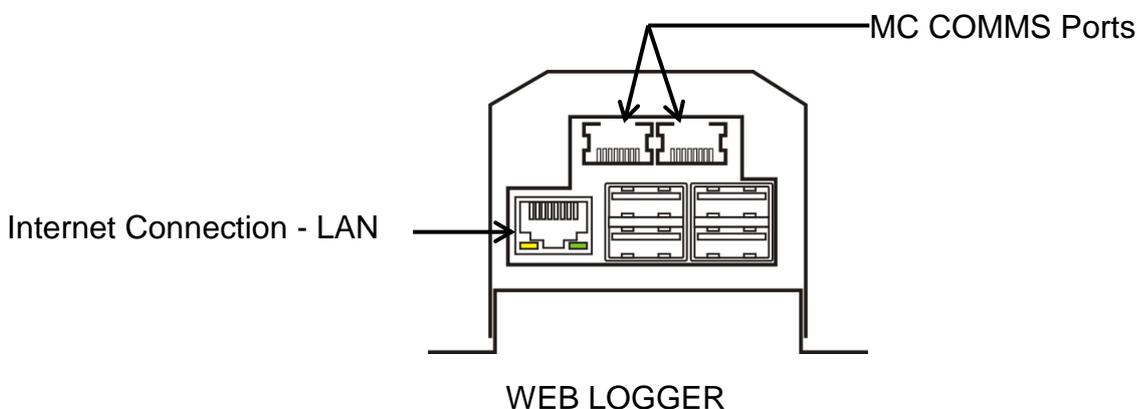

The Web-Loggers' power is supplied by the connected battery bank. Supply voltage to not exceed 70V DC!


The Web-Logger is connected to the network through a MC COMS converter via the MC COMS port of the Web-Logger. The LAN or Ethernet port of the Web-Logger is then connected to an Internet enabled router.

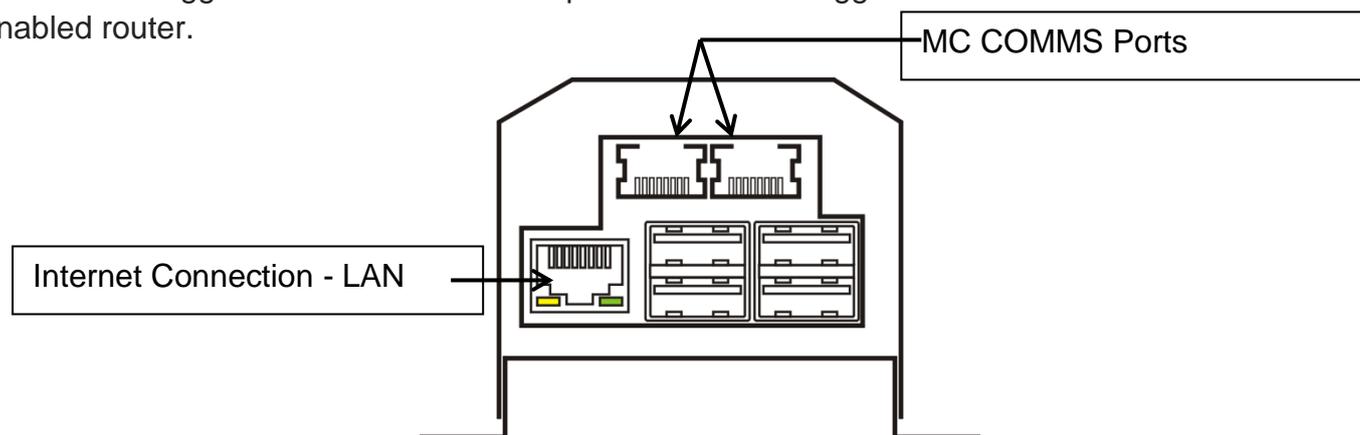


The Web-Loggers' power is supplied by the connected battery bank. Supply voltage to not exceed 70V DC!

The Web-Logger requires a cabled internet connection in order to upload the data to the Powermonitor website <https://www.powermonitor.co.za>.

The Web-Logger requires power from your batteries and has a separate connector for power. Connect the positive side to your battery positive and the negative side to your battery negative (max supply voltage to not exceed 70v DC)

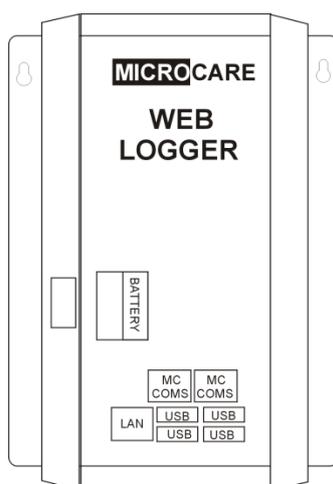

Plug the Ethernet cable into the silver Ethernet port of the Web-Logger (bottom row on the left hand side) and plug the other end of the Ethernet cable into your internet router. The Web-Logger uses DHCP to obtain a network connection automatically. The green and orange network LEDs will flash indicating a network connection to the router.

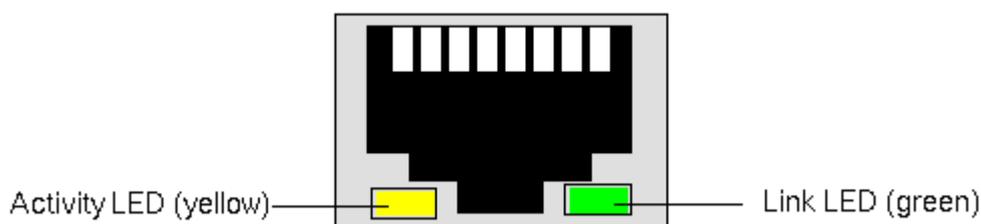


Once power is connected, the Web-Logger will power up, obtain a network address and internet connection. The Web-Logger will then attempt to download the settings it requires from the website in order to communicate to your devices and upload the data.

2. Accessing the logged data:


2.1 Registering your Web-Logger:

In order to tell the Web-Logger what data it needs to acquire from your devices, please register on the Powermonitor website by entering the URL:

<https://www.powermonitor.co.za>

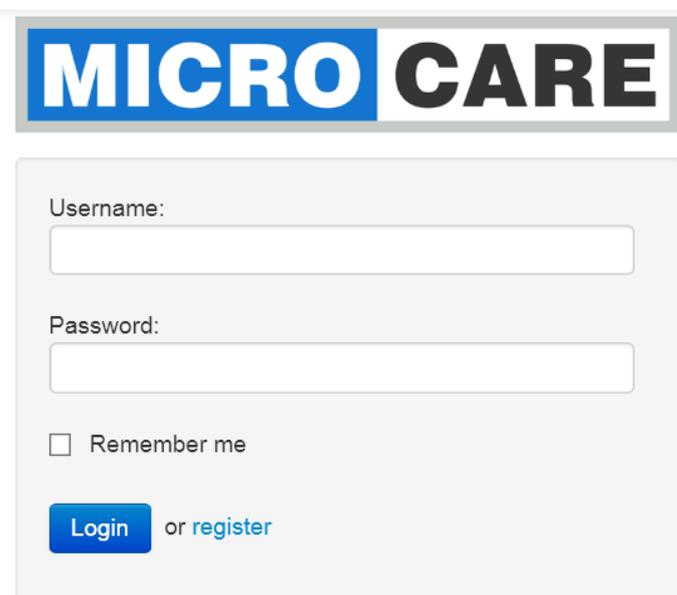

Log in using your credentials or select the “register” if you do not already have an account. Enter the required details and click the “Register”. Once you have created an account and logged onto the website, your profile page will be shown. On the menu bar, select the menu item called "Setup" on the top, right hand side of the screen. Here a list of registered Web-Loggers will be listed (if you have more than one).

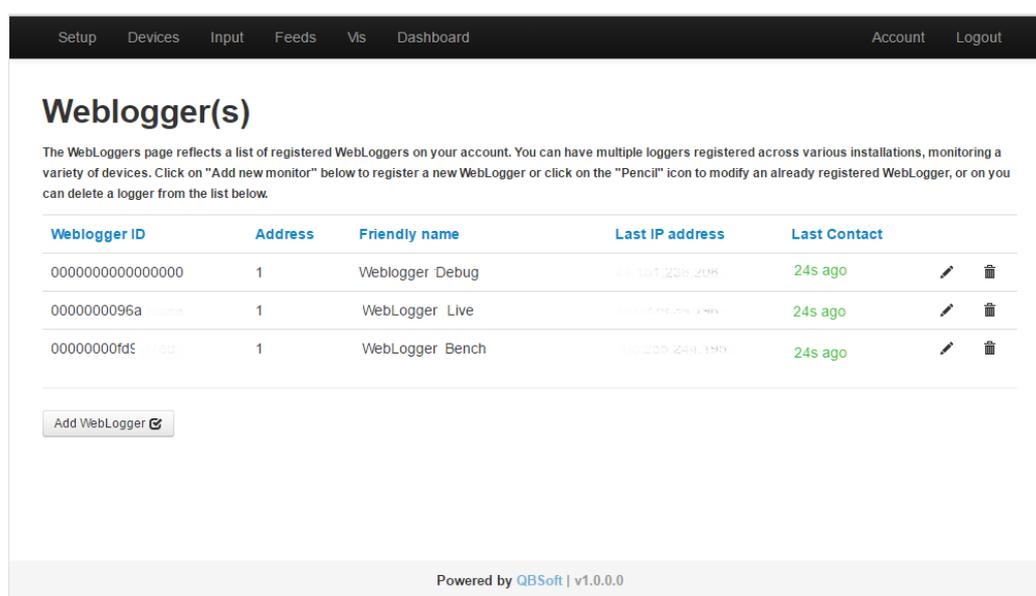

Weblogger ID	Address	Friendly name	Last IP address	Last Contact	
0000000000000000	1	Weblogger Debug	192.168.1.238.204	24s ago	 
0000000096a	1	WebLogger Live	192.168.1.238.204	24s ago	 
0000000fd5	1	WebLogger Bench	192.168.1.244.140	24s ago	 

[Add WebLogger](#)

Powered by QBSOft | v1.0.0.0

Select "Add Web-Logger" to add a new Web-Logger.

The screenshot shows a web interface with a dark theme. At the top, there are navigation links: Setup, Devices, Input, Feeds, Vis, Dashboard, Account, and Logout. The main content area is titled 'Weblogger' and contains a list of weblogger IDs. A modal window titled 'Add/Alter Weblogger' is open, displaying a form with the following fields:

- Weblogger ID: 0000000000000000
- Network Address: 1
- Friendly name: My Web-Logger
- Port to use: /dev/ttyAMA0
- Data buffer: 1,000
- Upload size: 100
- Upload interval (s): 5 seconds
- Upload type: All Data

2.1.1 Weblogger ID:

Enter the Web-Loggers ID which can be found on the Web-Logger itself. This is a unique number to identify the Web-Logger.

2.1.2 Network Address:

Each device in the Microcare communication network must have a unique address. Enter a network address for the Web-Logger or you can leave the network address as 1 (default).

2.1.3 Friendly Name:

Enter a "friendly name" so that you can identify each unit easier (if you have more than one Web-Logger).

2.1.4 Port to use:

Leave as default.

2.1.5 Data Buffer:

The Data Buffer stipulates how many data records should be kept in the Web-Logger's memory should the internet connection fail. The Web-Logger will buffer the data from the devices until the buffer is full thereafter the oldest data records will be removed from the buffer first, retaining the last X number of records.

2.1.6 Upload Size:

The upload size setting specifies how many records from the buffer will be uploaded at the same time. For example: If the data buffer is full (1,000), 100 records at a time will be uploaded in order to clear the buffer over 10 upload intervals (100 x 10 = 1,000). Depending in your internet speed a lower Upload Size will ensure that the Web-Logger does not occupy much network resources however a large upload size will use more network resources in order to upload a large amount of data.

Upload interval (s):

The upload interval specifies how often (in seconds) the Web-Logger uploads the device data to the Powermonitor website. The default is every 5 seconds.

The upload interval has a direct impact on the Data Buffer as well as the Upload size settings. If the interval is set very high, let's say every 10 minutes, the data buffer will be used to hold the data during the upload intervals. If the buffer is set to low, some data may be discarded if the buffer fills up. The Upload Size will be used to upload the data records in batches of 100 every 10 minutes. If the data buffer is full (i.e. 1,000) and an upload batch size of 100 and an upload interval, it would take:

1,000 / 100 = 10 uploads
10 * 10min intervals = 100min (1 Hour 40min!)

** How the data buffer fills up will be described below.

2.1.7 Upload Type:

Currently the "All Data" option is the only supported option.

Click save to save the changes.

If the WebLogger has a working internet connection, you will notice the "last contact" column will show when last the Web-Logger made contact with the site. The Web-Logger checks for settings once a minute.

Last Contact

27s ago

3. Registering Devices:

In order for the Web-Logger to gather information from your Microcare devices, you need to tell it what data to acquire from each device.

On the website menu bar, select the “Devices” option. Here a list of Microcare monitored device feeds will be shown. If you have more than one Web-Logger, the device feeds will be grouped by Web-Logger.

Address	Data Stream	Interval (s)	Timeout (ms)	Retry Count
QuentinWebLoggerLive (000000096a9d868)				
3754	Inverter Realtime data	5	500	2
13002	Battery Monitor Realtime data	5	500	2
13002	Battery Monitor Battery Status	5	500	2
13002	Battery Monitor Log Totals	5	500	2
13010	MPPT Realtime data	5	500	2
13010	MPPT 7Day log	5	500	2
13010	MPPT Log Totals	5	500	2
QuentinWebLoggerBench (0000000fd92f7e8)				

Add new device feed

3.1 Adding a new device feed:

Click "Add new device" in order to add a new Microcare device.

Add/Alter Device

Select Weblogger: QuentinWebLoggerLive

Device Type: Microcare MPPT

Data Stream: MPPT Realtime Data

Network Address: 5

Request Interval (s): 5

Request Timeout: 500 ms

Retry Count: 3

Cancel Save

3.1.1 Select Weblogger:

Select the Web-Logger to which the device is connected. If you have more than one Web-Logger a list of Web-Loggers will be shown.

3.1.2 Device Type:

Select the type of device you have connected to the Web-Logger communication network.

Supported devices are:

1. Microcare LCD MPPT
2. Microcare Inverter
3. Microcare Battery Monitor

Any combination of the above devices can be monitored. I.e. if you have 1, 2, 3 or more MPPT's, 1, 2, 3 or more Inverters and/or 1 or more Battery monitors connected to the same Microcare communications network.

3.1.3 Data Stream:

The data stream specifies the data feed available from the selected device type.

Real-Time data:

The current status of the device (Battery Voltage, Battery Current etc.)

Other feed options are device dependant. For more info on the values supplied by the feed, see the "Input" menu option of the Powermonitor website.

3.1.4 Network Address:

The network address is the unique address of the device you are capturing. Each device on the Microcare communications network must have a unique address.

The default for a:

Web-Logger is:	1
MPPT	5
Inverter:	15
Battery Monitor:	25

If you have multiple devices, for example MPPTs you will need to ensure each MPPT has a unique address set. By default, the MPPT is set to network address 5. Adding a second MPPT with address 5 will yield incorrect data feeds. To change or to obtain the network address of your device, please see the respective user manual for the device.

3.1.5 Request Interval (s):

The request interval specifies how often the data is obtained from the device, in seconds. The default is every 5 seconds.

If you have multiple devices connected on the Microcare communication network, each device will be queried in sequence, one by one.

3.1.6 Request Timeout:

The request timeout specifies how long the Web-Logger needs to wait for a response form the specific device. If the timeout is set to low (<300ms) it could result in miss-reads form the device if the network is busy or the device is busy.

The recommended default is 500ms.

3.1.7 Retry count:

The retry count specifies how many times the Web-Logger should retry obtaining the data from the device after a timeout has occurred. The Web-Logger will re-request the data from the device consecutively until a successful data request has occurred or until the number of re-tries are exceeded.

Click "Save" to add the device.

Repeat these steps for each device feed you want to add.

3.2 Avoiding data request delays:

A data request delay occurs when the time it takes to request data from all the listed device feeds takes longer to acquire than the set request interval on a single device.

For example, assuming the following configuration has been captured for each device feed:

Number of device feeds	: 10
Request Interval	: 5 seconds
Timeout value	: 500ms (0.5 seconds)
Retry count	: 3

In order to obtain the data for all the listed device feeds, assuming each device responds within 300ms, it would take in total:

$10 \text{ device feeds} \times 300\text{ms} = 3000\text{ms} \text{ (3 seconds)}$

Assuming one of the devices that has 3 device feeds set, is not connected and causes a timeout. The retry count of 3 has been set. The time it takes to query this specific device will then be:

$3 \text{ retries} \times 500\text{ms} = 1500\text{ms} \times 3 \text{ feeds} = 4500\text{ms} \text{ (4.5 seconds)}$

The total time to obtain data from all the devices would then be as follows:

9 device feeds x 100ms	= 900ms
1 time out device	= 4500ms
	= 5400ms (5.4 seconds)

The total time exceeds the 5 second interval selected initially. This will cause the Web-logger to take longer than expected to process the list of device feeds and will result in the data not being sampled every 5 seconds.

In order to correct this situation:

1. Attend to the non-communication device
2. Lower the timeout
3. Lower the retry count
4. Extend the request interval

4. The number of device feeds and the data buffer

The number of device feeds as well as their request interval and the upload interval of the Web-Logger will determine how quickly the Web-Logger buffer will be filled up

As per the above example, if you have 10 device feeds set to request every 5 seconds, a total of 10 data samples will be buffered every 5 seconds. If the upload interval is set to every 1 minute, a total of 120 data samples will be stored in the buffer:

Total requests per device feed in 1 minute:

60 seconds / 5 seconds = 12 requests

Total samples per 1 minute:

10 feeds x 12 requests = 120 data samples.

If the data buffer is set to low, for example 100, the first 20 data samples will then be lost.

The upload size, set to 100 in this example, will then upload the first 100 data samples and then the remaining 20 data samples every 1 minute. The uploads take place consecutively until the data buffer is empty.

5. Device feed values:

Once you have added your list of device feed, proceed to the "Inputs" menu option.

Once the Web-Logger has determined the device feeds required it will commence with requesting the data from the specific devices and will then upload the data to the Powermonitor website. The inputs and their values from the device is then listed in the "Input" section of the Website, grouped by the device feed type:

Address	Data property	Process list	Last updated	Value
5	fd92f7e8 - MPPT Panel Voltage		inactive	0.00
5	fd92f7e8 - MPPT Battery Voltage	log	inactive	23.9
5	fd92f7e8 - MPPT Battery Current		inactive	0.00
5	fd92f7e8 - MPPT Battery Temp		inactive	0.00
5	fd92f7e8 - MPPT Status		inactive	0.00
5	fd92f7e8 - MPPT Switched		inactive	0.00
13010	96a9d868 - MPPT Panel Voltage	log log	inactive	50.4
13010	96a9d868 - MPPT Panel Current	log	inactive	0.00

Once the device feed values are available on the Powermonitor website, the values can then be used to construct "Feed" values that are used to display and graph the device feed values in customized dashboards.

The construction of Feed values and dashboard are covered beyond the scope of this document and is covered in detail in the Powermonitor Website manual.

6. DESTRIER ELECTRONICS LIMITED CARRY- IN WARRANTY

Destrier Electronics warrants this 1-5kW range of inverters against defects in workmanship and materials, fair wear and tear accepted, for a period of 3 (three) years from the date of delivery/collection and is based on a carry-in basis. Where the installation of the product makes it impractical to carry-in to our workshops, Destrier Electronics reserves the right to charge for travel time and kilometres travelled to and from the site where the product is installed.

During this warranty period, Destrier Electronics will, at its own discretion, repair or replace the defective product free of charge. This warranty will be considered void if the unit has suffered any physical damage or alteration, either internally or externally, and does not cover damages arising from improper use such as, but not exclusive to:

- Reverse of battery polarity.
- Inadequate or incorrect connection of the product and/or of its accessories.
- Mechanical shock or deformation.
- Contact with liquid or oxidation by condensation.
- Use in an inappropriate environment (dust, corrosive vapour, humidity, high temperature, biological infestation.)
- Breakage or damage due to lightning, surges, spikes or other electrical events.
- Connection terminals and screws destroyed or other damage such as overheating due to insufficient tightening of terminals.
- When considering any electronic breakage except due to lightning, reverse polarity, over-voltage, etc. the state of the internal control circuitry determines the warranty.

This warranty will not apply where the product has been misused, neglected, improperly installed, or repaired by anyone else than Destrier Electronics or one of its authorised Qualified Service Partners. In order to qualify for the warranty, the product must not be disassembled or modified. Repair or replacement are our sole remedies. Destrier Electronics shall not be liable for damages, whether direct, incidental, special, or consequential, even caused by negligence or fault. Destrier Electronics owns all parts removed from repaired products. Destrier Electronics uses new or re-conditioned parts made by various manufacturers in performing warranty repairs and building replacement products. If Destrier Electronics repairs or replaces a part of a product, its warranty term is not extended. Removal of serial nos. may void the warranty.

All remedies and the measure for damages are limited to the above. Destrier Electronics shall in no event be liable for consequential, incidental, contingent or special damages, even if having been advised of the probability of such damages. Any and all other warranties expressed or implied arising by law, course of dealing, course of performance, usage of trade or otherwise, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited in duration to a period of 3 (three) years from the date of purchase.

Life Support Policy:

As a general policy, Destrier Electronics does not recommend the use of any of its products in life support applications where failure or malfunction of the Destrier Electronics product can be reasonably expected to cause failure of the life support device or to significantly affect its safety or effectiveness.

Destrier Electronics does not recommend the use of any of its products in direct patient care. Destrier Electronics will not knowingly sell its products for use in such applications unless it receives in writing assurances satisfactory to Destrier Electronics that the risks of injury or damage have been minimised, the customer assumes all such risks, and the Liability of Destrier Electronics is adequately protected under the circumstances.

Caution:

Our products are sensitive. While all care is taken by us to dispatch goods with adequate packaging, Destrier Electronics is not responsible for any damages caused to products after they have left our premises.

7. REGISTRATION OF MY MICROCARE PRODUCT

Product Serial Number:

Product Description:

Date Purchased

From Whom was the Product Purchased?

Company Name

Contact Person

Contact Number

E-mail Address

Installation Company Information:

Company Name

Contact Person

Contact Number

E-mail Address

Details of Product Owner

Name & Surname

Address

City & Province

Contact Number

E-mail Address

Date Installed

Microcare: 1st Floor, Neave Industrial Park, Korsten, Port Elizabeth
P.O.Box 7227, Newton Park, 6055
Tel: 041 453 5761, Fax: 041 – 453 5763
Technical Support e-mail: support@microcare.co.za
Website: www.microcare.co.za

Registration by fax:

041 – 453 5763

Registration by e-mail:

support@microcare.co.za

Online Registration:

www.microcare.co.za/register-my-product